


Pro-Stitcher® LITE

Connect to Wi-Fi

Follow these instructions to connect to Wi-Fi to make updates, purchase designs, and download designs.

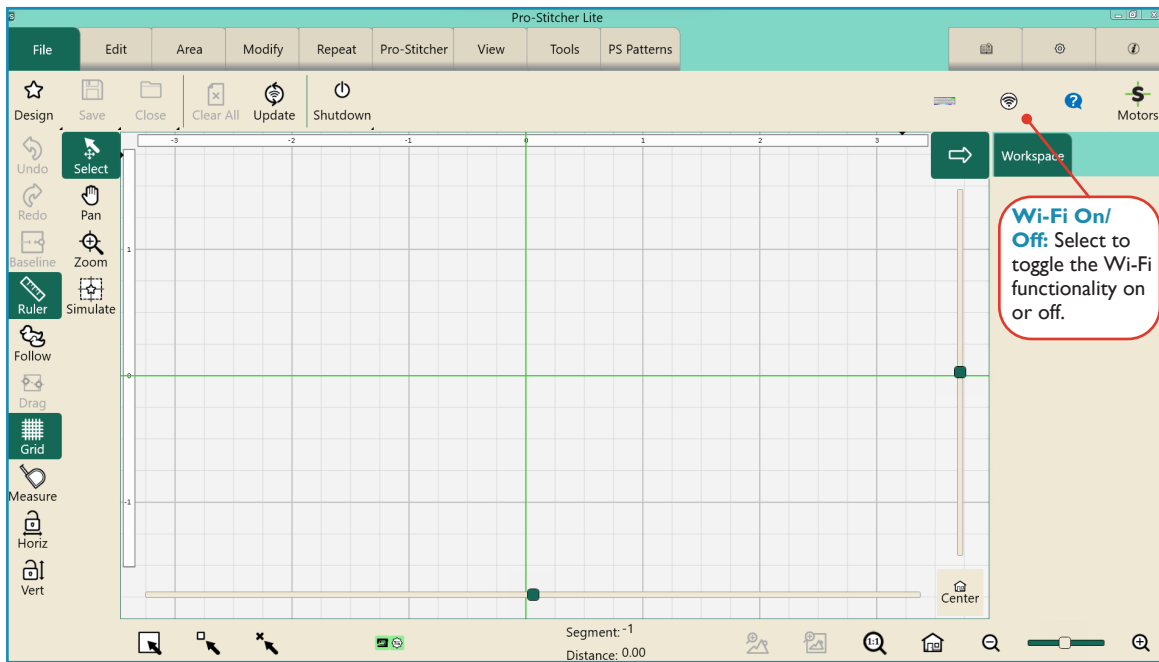

NOTE: When you first turn on the Wi-Fi capability in Pro-Stitcher Lite, you will need to make sure to connect to your chosen Wi-Fi network. After you have connected for the first time, the tablet will connect automatically to Wi-Fi when you turn on the Wi-Fi functionality.

Icon Meanings



Wi-Fi is on and connected



Wi-Fi is off and disconnected




Wi-Fi is on but not connected or found

Connect to the Wi-Fi (First Time)

1. On the ribbon on the right side, you'll see this Wi-Fi symbol, indicating that the Wi-Fi for Pro-Stitcher Lite is not turned on.
2. Press and hold your finger to this icon to open the Wi-Fi settings for your tablet.

Open the Tablet's Network Connections

1. You'll see the Network Connections window. Double-tap the Wi-Fi option or select Wi-Fi and then select Connect To.

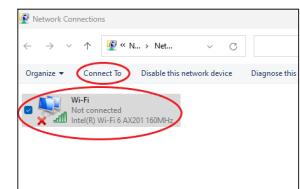



2. You'll see a list of Wi-Fi options. Select your network and, if needed, enter your password.




3. Once your Wi-Fi connection has been established, the icon in Pro-Stitcher Lite will change to what is shown on the right, indicating that the Wi-Fi is on and connected.




Connect to the Wi-Fi (after First Time)


1. On the ribbon on the right side, you'll see this Wi-Fi symbol, indicating that the Wi-Fi for Pro-Stitcher Lite is not turned on. 
2. The Wi-Fi icon will indicate that the Wi-Fi is turned on and connected to your previously established Wi-Fi connection. 

Troubleshoot a Connection Problem

1. If you attempt to connect to Wi-Fi but see this symbol, this means the Wi-Fi for Pro-Stitcher Lite is turned on, but your tablet is still not connected to it. This can mean that you are not in range of your selected Wi-Fi connection or the Wi-Fi of your Pro-Stitcher Lite tablet is turned off. 
2. When you see the above icon, press and hold the button to bring up your tablet's network connections.

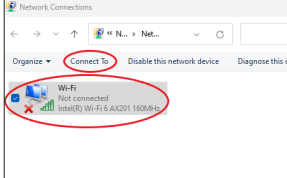3. You'll see the Network Connections window. Double-tap the Wi-Fi option or select Wi-Fi and then select Connect To. 

4. This will bring up the Wi-Fi network menu, where you can reconnect to your network.

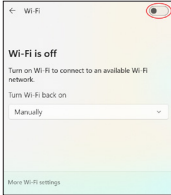5. However, you may discover that the Wi-Fi for the tablet is turned off. If this is the case, select the Off button to toggle the Wi-Fi switch back to the On position (circled in red). 

6. If you are still having problems connecting to your Wi-Fi network, please contact Pro-Stitcher Lite's technical support.