



 
© 2021 Pro-Stitcher Lite

Follow these steps to save or delete a design from the design library.

Save a Design


With a design selected in your workspace:

- Select **File** tab.
- **Save** on the ribbon.
- **Selected** from the drop-down menu.

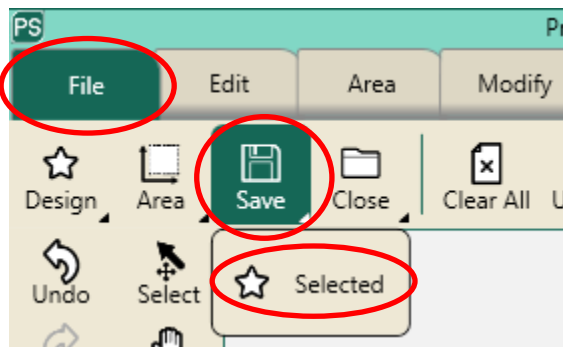


In the Save File window:

- Select the file for your design to save in.
- Tap in the text box at the bottom to name your design.
- Select Save.

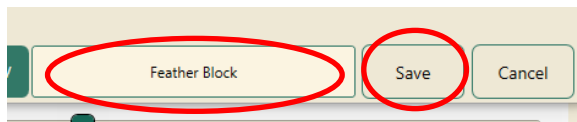

Delete a Design

 - Select **File** tab.
- **Design** on the ribbon.
- **Open** from the drop-down menu.

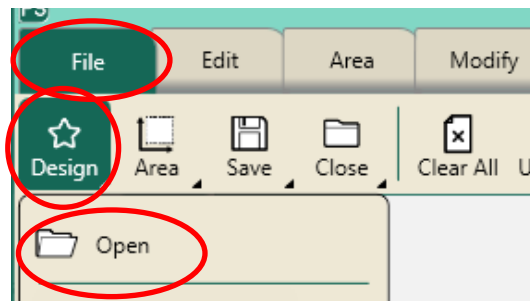

- In the Open a File window, select the design you want to delete.
- Press **Delete File**.



- A warning will load asking if you want to delete the design. Press **Yes**.

