

It is very important to turn on and turn off your Pro-Stitcher in the correct order.

Turn on Pro-Stitcher:

1. Plug machine and Pro-Stitcher carriage in, or turn on the surge protector.
2. Turn on your machine (use the switch on the back).
3. Hold down the power button of the tablet until the screen turns on (this may take a few seconds).
4. Pro-Stitcher will automatically load on the tablet; do not press the PS icon.

Shut-Down Pro-Stitcher:

1. Select **File** tab
2. Press **Shutdown**
 - Select **Shut Down** from the dropdown menu.
 1. Wait for the Pro-Stitcher tablet to completely shut down.
 2. Turn off your machine, using the switch on the back.
 3. Unplug the machine and Pro-Stitcher carriage, or turn off the surge protector.

