


Pro-Stitcher®

Save & Delete Designs


Follow these steps to save a design or delete a design from the Pro-Stitcher design library.

Save a Design

1. With a design selected in your workspace:
 - a. Select **Pro-Stitcher** tab.
 - b. **Save** on the ribbon.
 - c. **Selected** from the drop-down.

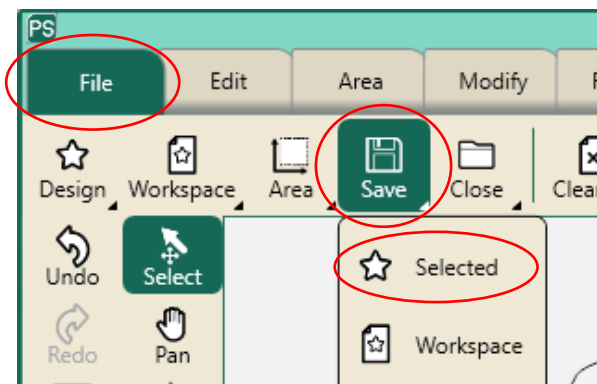


2. In the Save File window:
 - a. Select the file for your design to save in.
 - b. Tap in the text box at the bottom to name your design.
3. Select Save.

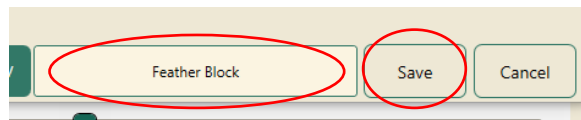


Delete a Design

1. Select **File** tab.
2. **Design** on the ribbon.
3. **Open** from the drop-down menu.

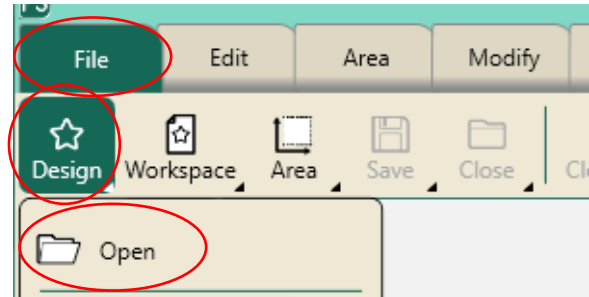

4. In the Open a File window, select the design you want to delete.
5. Press **Delete File**.

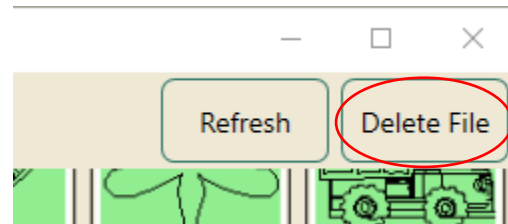

6. A warning will load asking if you want to delete the design. Press **Yes**.

