

## Home Page Features

1. Double click on the Pro-Stitcher Designer Icon on your desktop to open the software.



2. Pro-Stitcher Designer will open, and the home page will appear.

a) There are several buttons available along the bottom of the home page.




b) From the home page, you can choose to create a new design, open a design, open recently used files or designs, see what's new, and open the Pro-Stitcher Designer User Manual.


3. To open a new design page ready for a new design, click on **Create a New Design**.



• A new design page will load.

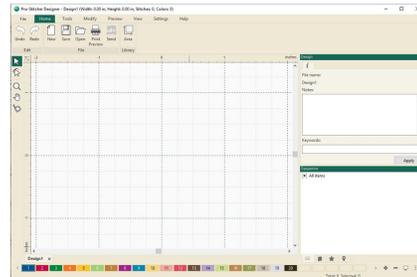

 4. To return to the home page at any time, select the **Help** tab.




a) From the Ribbon, choose **My Home**.



b) This opens the home page.

 
5. To open a design which will load on a new design page from the home page, click on **Open a Design**.




a) A page will load which allows you to choose from designs saved on your computer.

- Under look in, you can choose where to search on your computer for designs.
- Under Files of type, you can select which type of files to choose from.

Click on the design to select it, then click **Open** to load the design on a new design page.

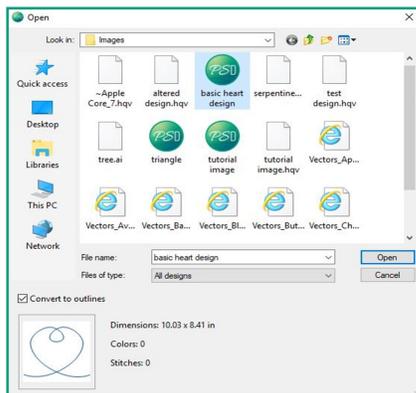

**6. To open a recently used design, click on **Open Recently Used**.**

 


a) Designer will automatically load the last design used.

**7. To learn what is new for Designer, click on **What's New?****



 a) Designer will list the latest updates, tutorials on how to use the newest features and other great tips and tricks for using Designer.

**8. To access the User Manual, click on the **User Manual**.**



a) A digital copy of the user manual will load in a separate window on your desktop.

- This copy of the manual is available to be searched (ctrl + f on your keyboard will open a search window).
- You can print your own copy of the user manual from here.

**9. Click on file, choose print, and print a copy on your home printer.**